

## PRECISION CUT-OFF MACHINE

# **BRILLANT 220**





#### **CONTROL**

All axes can be controlled with a joystick. The built-in electronic control with its simple and clearly defined touch screen display enables easy programming, storage and loading.

During the automatic cutting process all parameters such as feed speed, cutting force etc. can be monitored and modified.



The Brillant 220 is a compact, user-friendly precision wet abrasive cut-off machine. It can be fitted with up to three automatic axes (X, Y, Z) and several cutting modes for maximum flexibility and ideal use of space.

With its modular construction and different options and clamping tools the Brillant 220 can be easily equipped for specific applications.



### **CONSTRUCTION**

Openings on both sides of the solid aluminium construction allow sectioning of long or continuous parts up to  $\emptyset$  70 mm.

The cutting chamber which is illuminated by enegysaving LED is easily accessable through a sliding front door and the side door with safety interlock. The cutting wheel is water cooled by versatile jointed hoses on both sides.





## **AXES**

The Brillant 220 is standardly equipped with automatic vertical cut-off (Y-axis, 80 mm) and definable regulated travel for large cutting wheels.

The horizontal movement (X-axis, 210 mm) is available in automatic or manual mode. In combination with optional cross-feed (Z-axis, 80 mm) it allows maximum flexibility for precise, soft touch cutting.



## **CUTTING MODES**

Step and diagonal cut optimize the operating angle for gently cutting. The step cut divides the sample in layers and is especially suited for large parts and bulky materials. The diagonal cut is recommended for asymmetrical specimens; this is done by combining vertical and horizontal cut modes.

#### **PRECISION CROSS FEED**

The automatic cross feed with serial cutting function produces precise parallel cuts of 1  $\mu$ m (0.001 mm) in equal or varied sizes. The preselected cut-off wheel thickness is automatically included in the process. The integrated Z-axis can also be used as a precision cross feed for pot wheels (thin cuts).





#### **CLAMPING TOOLS**

The Brillant 220 is equipped with the innovative QATM-easy-clamping system.

This makes changing and adjusting of clamping tools very easy and supersedes fixing by T-slots. All clamping tools, e.g. Fast Lock Vice 50, 60, 80, X-Clamp, Vacuum Vice and Rotavice can be fitted with the Easy-clamping system.

## **FEED CONTROL**

The feed adjusts automatically to different thickness and hardness of materials. The feed speed is variable.

#### **PULSED CUTTING**

In pulsed cutting mode the feed speed is interrupted and continued in opposite direction periodically. This helps the wheel stay sharp and allows coolant to flush the point of contact, clearing debris and keeping the material cool. The characteristic, pulsed cutting in definable intervals can be switched on to every cutting mode.

## **LASER**

With line laser you can display the scheduled cut on the sample. This helps to define the exact cutting position.




## **SHARPENING DEVICE**

Diamond cutting wheels and pot wheels can be dressed easily with the sharpening device. It is manually operated by a lever from outside and during the operation sequence.





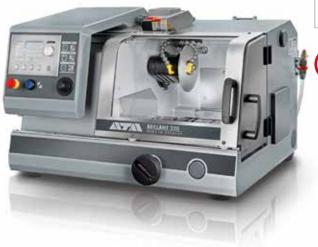

## **BASIC MODULE**

## **Brillant 220**

- I automatic Y-axis
- I openings on the left and right for continuous long parts
- sliding door
- I table made of stainless steel
- I electronic control with clear LCD
- I electronic travel measuring
- I cutting force dependent feed-control
- I automatic pulsed cutting
- I step cut, diagonal cut
- I program storage
- I direct positioning via joystick (all automatic axes)
- I current safety standard with door interlock (safety protection)
- I optimal cutting chamber with LED illumination
- I solid aluminium construction, powder coated
- I e-Lab-ready

Order No.: M1890000



Serial cuts with Z-axis

EQUIPMENT		
POWER SUPPLY		
Equipment 1		Equipment 2
230 V/50 Hz (1Ph/N/PE)		110 V/60 Hz (1Ph/N/PE)
Order No.: A1890000		Order No.: A1890001
ARBOUR SIZE		
Equipment 1 Fixed shaft fitting		Equipment 2 Quick-change system
Arbour size	Ø 12.7 mm	

on request

## **TABLE DRIVE**

Order No.: A1890002

Equipment 1		Equipment 2	
X-axis manual (handle)		X-Axis automatic	
Travel X-axis	210 mm	Travel X-axis	210 mm
Precision	0.1 mm	Precision	0.1 mm
Order No.: A1890	004	Order No.: A189000	5

## **CROSS FEED Z-AXIS**

Equipment 1	Equipment 2		Equipment 3	
without Z-axis	Z-axis manual (handle)		Z-axis automatic	
	Travel Z-axis	80 mm	Travel Z-axis	80 mm
	Precision	0.1 mm	Precision	0.001 mm
Order No.: A1890008	Order No.: A1890009		Order No.: A1890010	





## **OPTION**

#### **ROTATION TOOL**

- I tool with vertical rotary feed, parallel to wheel
- I angle input via software control

on request

#### LASER ALIGNMENT AID

- I laser line to visualize the cutting line
- I laser class 1

Order No.: A1890011

## **ACCESSORIES**

## RECIRCULATION COOLING SYSTEM



I no voltage selection required



- I controlled by cut-off machine
- I mobile with insertion mechanism for System Lab cabinets
- I 2-chamber-pvccompartment 45 ltr.I inlet sieve and filter bag

Tank 15 ltr. Tank 45 ltr.

Pump 8 ltr./min, 24 V Pump 8 ltr./min, 24 V

WxHxD 400 x 220 x 300 mm WxHxD 366 x 540(640) x 610 mm

Height incl. pump ~ 350 mm

Order No.: A1800160 Order No.: A5800494

#### **CENTRIFUGAL SEPARATOR**



- I to remove coolant mist
- I increases quality of illumination
- I exhauster power 180 or 215 m³/h, depends on power supply

400 V/50 Hz (3Ph/PE) Order No.: Z1820009

480 V/60 Hz (3Ph/PE)

Order No.: Z1820012 220 V/60 Hz (3Ph/PE)

Order No.: Z1820011

#### SAMPLE COLLECTOR



I stainless steel, incl. fixing screws

Order No.: Z1800002

## SHARPENING DEVICE



I for dressing diamond and pot wheel


Order No.: A1890012

CUTTING





instruments

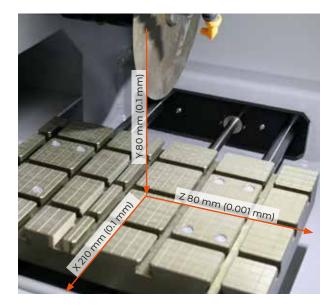

## **ACCESSORIES**

## **BASIC SET BRILLANT 220**

Order No.: Z1890003

SPECIFICATIONS	
Max. cutting capacity	Ø 75 mm (depends on cut-off wheel)
Cut-off wheel	75 – 203 mm/8"
Arbour size	Ø 12.7 mm

## **VERTICAL / HORIZONTAL MOVEMENT (X-/Y-AXIS)**

,	
Table WxD	300 x 210 mm (8 mm T-slot)
Feed	0.005 – 3 mm/sec
Precision	0.1 mm
Vertical movement (Y-axis)	80 mm
Horizontal movement (X-axis)	210 mm



Table WxD		280 x 210 mm (8 mm T-slot)
Feed		80 mm
Precision		0.001 mm (1 µm)
Variable speed		300 – 5000 rpm in steps of 100 rpm
Motor cut-off wheel		0.75 kW, S1-mode
Connected load		2.3 kVA
Power supply	1 2	230 V/50 Hz (1Ph/N/PE) 110 V/60 Hz (1Ph/N/PE)
WxHxD		710 x 570 x 485 mm
Cutting chamber WxD		405 x 500 mm
Weight		~ 82 kg

